
Flat Panel VMT Natural Stones & Natural Woods

2380x1190x20mm

Installation Manual





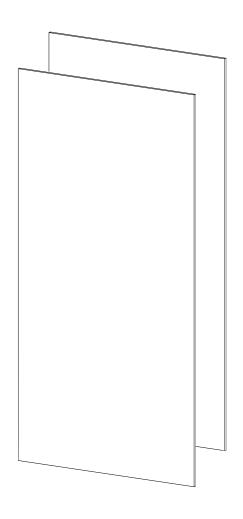


Included





Flat Panel VMT 2380x1190x20mm

Not Included

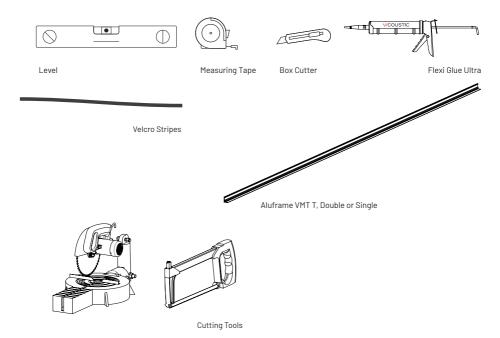



^{*}This product should be handled by two installers.

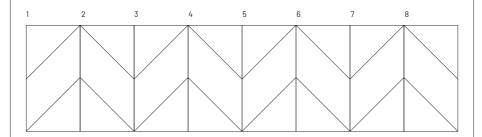

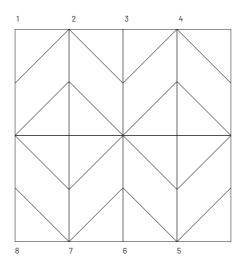


İ

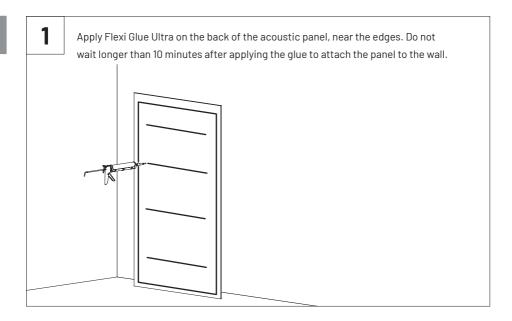


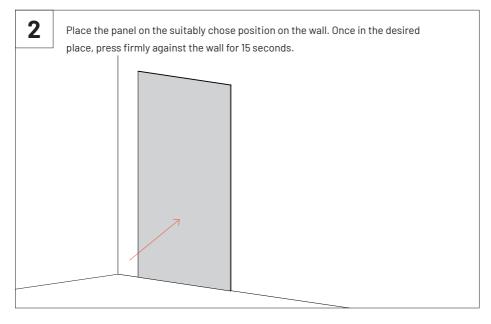


To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding

Full wall installation

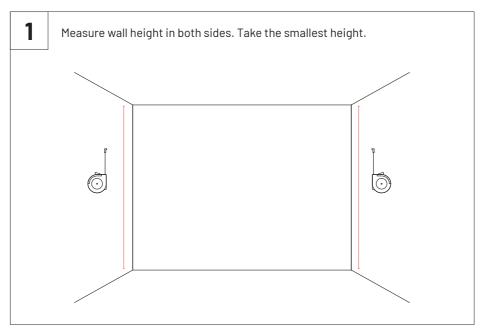


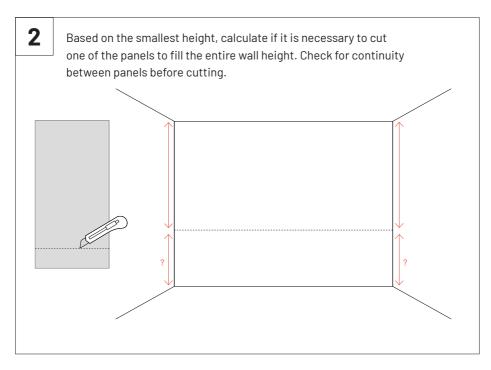

Glue the panels directly to the wall with Flexi Glue Ultra.

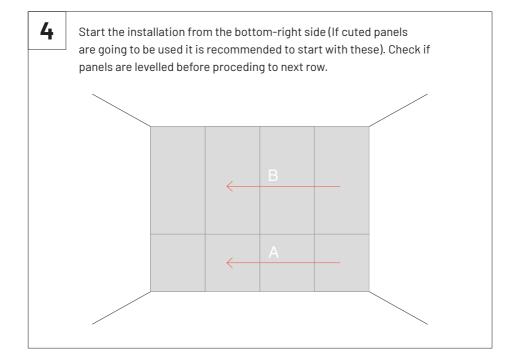

You can use the Aluframe VMT T, to hide the joints between the panels.

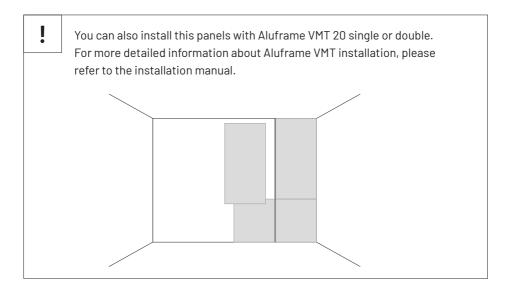

Do not apply Flat Panel VMT behind radiators or too close to a heat source.

İ

Main Office, R&D & Logistics

Avenida do Pólo 3, № 159, Carvalhosa 4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro Nº 16, Armazém 9 2820-690 Charneca da Caparica, Portugal T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2023 | V4

No parts of this document might be copied and/or published without written consent of Vicoustic.